


Flavor Burst™


ELE 924 Wireless RF Switch

Installation


The Wireless RF Switch works on a radio frequency signal sent from the Color Touch Panel. It is only compatible with the Flavor Burst CTP Series Models and freezers that have the internal switch connection. This connection is typically located just under the freezer door panel and to the left. For more information, please contact your local Flavor Burst® distributor.

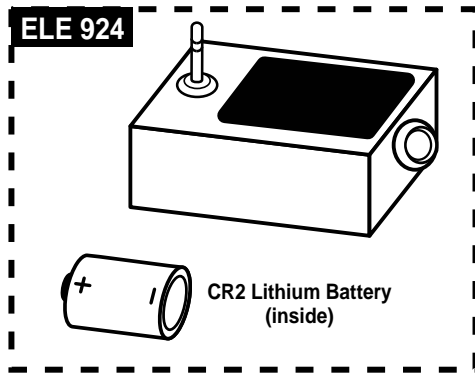


1 Clean and dry the area around the freezer switch port.

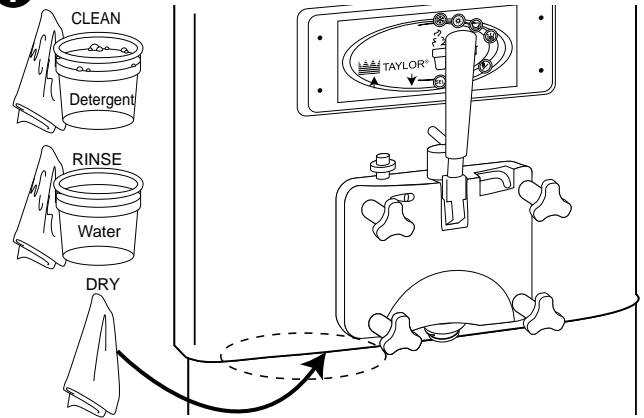


1 Remove the protective covering from the Velcro strip on the wireless spigot switch.

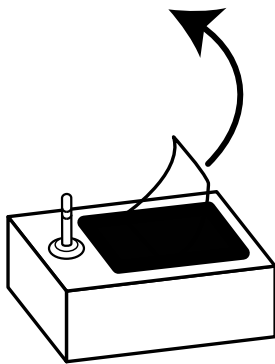

2 Insert the pin of the wireless switch into the switch port underneath the freezer door panel. Press the switch to the surface of the panel to adhere the Velcro strip to the freezer.

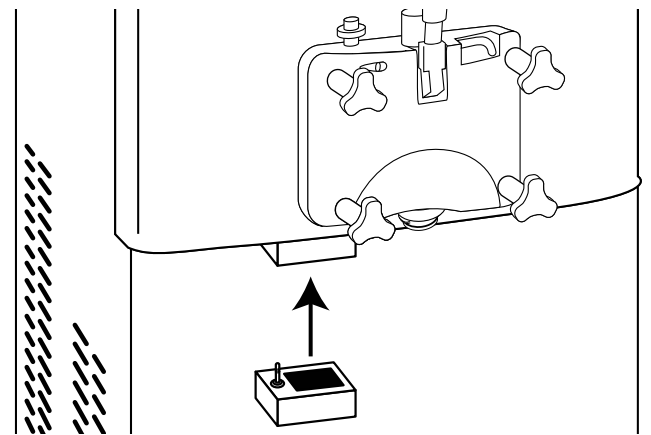

3 Press the button on the end of the wireless switch to activate the switch. The button should remain depressed in the "ON" position. Press the switch again to turn it off when not in use or while cleaning.

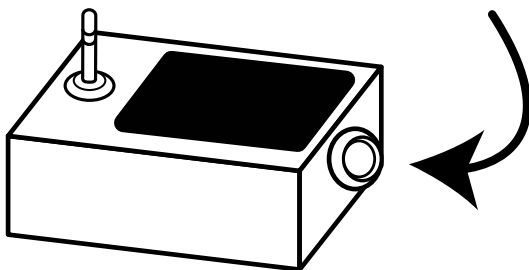

4 To change the battery, remove the four screws and gently open the compartment. Replace the old battery with a new CR2 Lithium battery, installing the positive end of the battery on the side near the wires.

