Flavor Burst®

MIS 3220 Color Touch Panel Side Mounting Bracket

Assembly and Installation

The Color Touch Panel side mounting bracket is designed to hold the Touch Panel in place on either side of the freezer. The bracket pieces can be flipped and turned around for a variety of assembly styles to suit your equipment setup. The assembly is secured to the side service panel and freezer frame using self-drilled screws. For more information, contact your local distributor.

MIS 3220

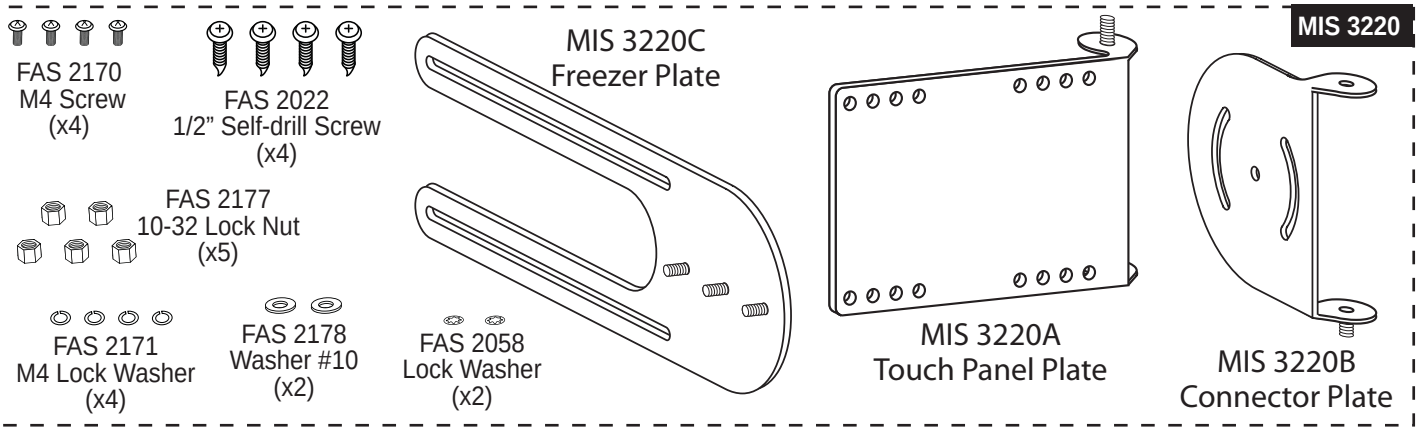

1 Connect the Touch Panel Plate to the Connector Plate as shown, using two FAS 2177 lock nuts and FAS 2058 lock washers. Tighten the nuts just enough to hold the plates in position.

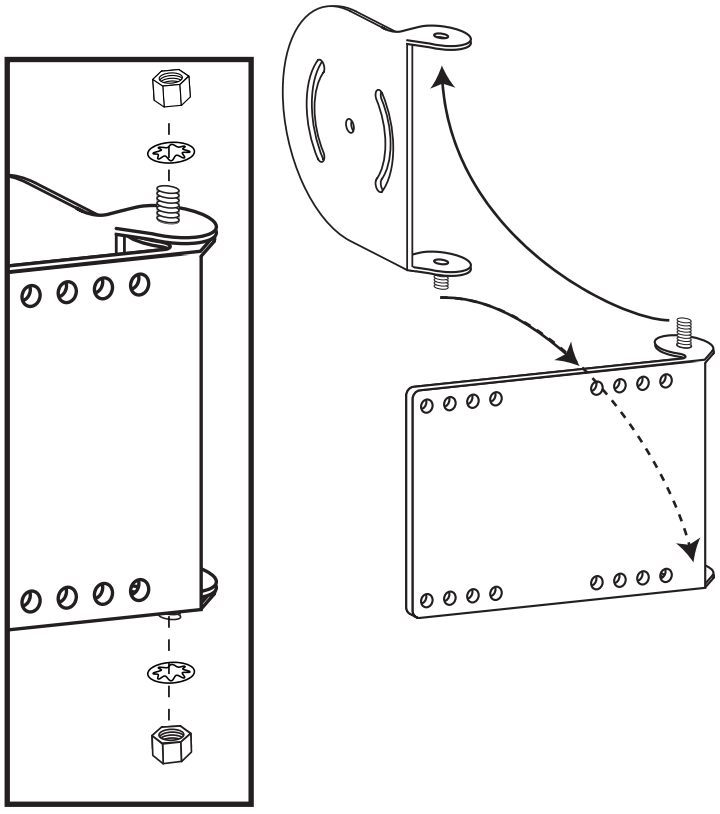

2 Install the Touch Panel Plate to the back of the Color Touch Panel using the four FAS 2070 screws and FAS 2071 lock washers provided. When installing the Panel assembly on the right side of the freezer, the bracket hinge should be to the left. For left-side installation, attached the bracket on the Panel with the hinge to the right.

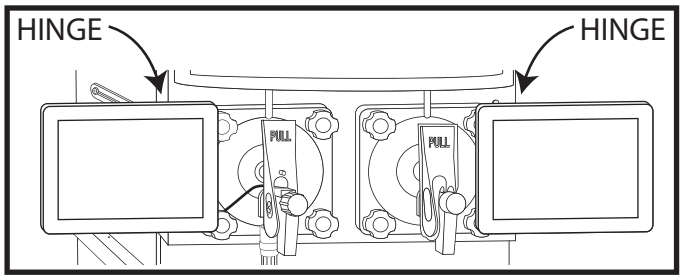

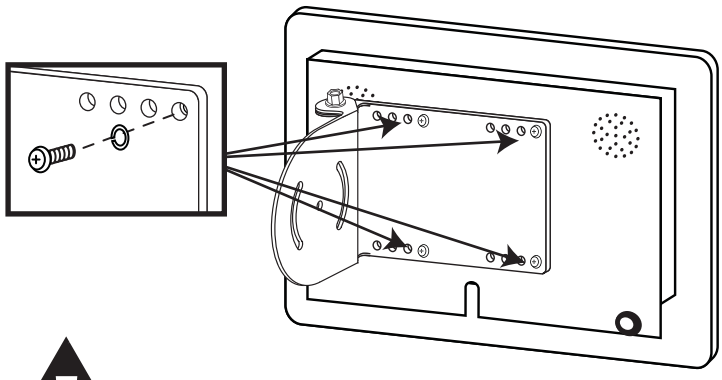

NOTE: THE CLOSER THE HINGES ARE TO THE OUTSIDE OF THE PANEL, THE LESS OVERHANG THERE WILL BE ON THE FREEZER. CHOOSE THE HOLE SET ON THE PANEL BRACKET THAT WORKS BEST FOR YOUR SETUP.

3 Install the Freezer Plate to the Connector Plate. The posts of the Freezer Plate should be to the inside of the assembly so you can access the nuts. Tighten the nuts just enough to hold the assembly in position. Use the two FAS 2178 washers on the outside posts and secure the three posts with the FAS 2177 nuts.

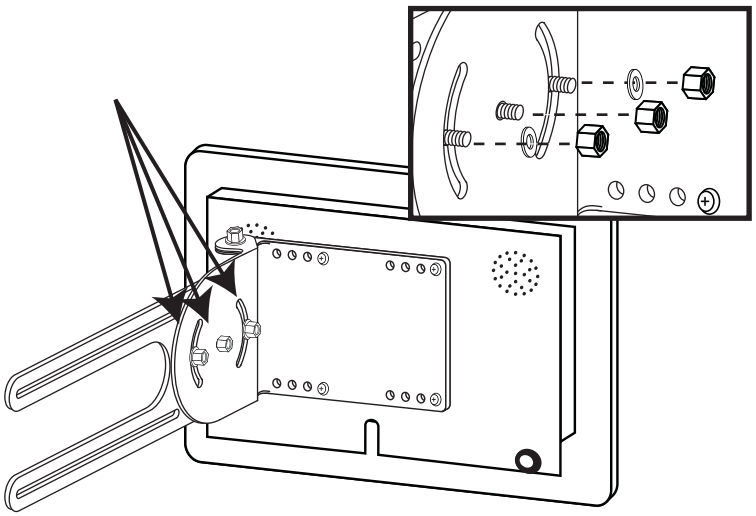

4 Hold the bracket and panel assembly up to the freezer in the position that works best for your setup. Position the Freezer Plate so that you are able to drill a screw through one of the two long slots into the freezer frame near the front of the freezer. Ensure the plate is level horizontally and then mark its position.

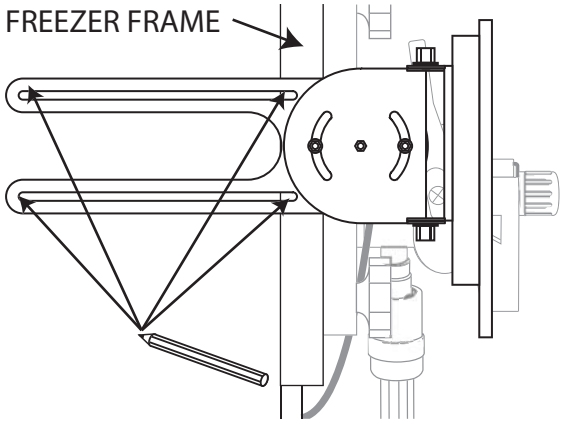

5 Remove the Color Touch Panel and Touch Panel Plate from the rest of the bracket assembly. Secure the Freezer Plate to the freezer using the four FAS 2022 self-drill screws provided, using the marks you made as a guide. Install a screw into each long slot at each end for maximum stability.

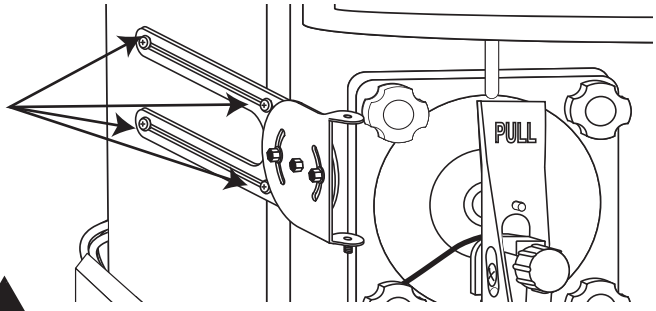

NOTE: TAKE CARE WHEN DRILLING INTO THE FREEZER FRAME AND SIDE PANEL.

6 Reinstall the rest of the Color Touch Panel and Plate to the bracket assembly and tighten the nuts when the panel is in the desired position.

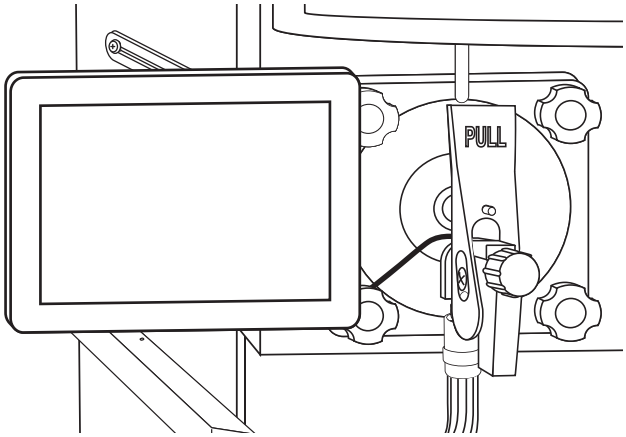
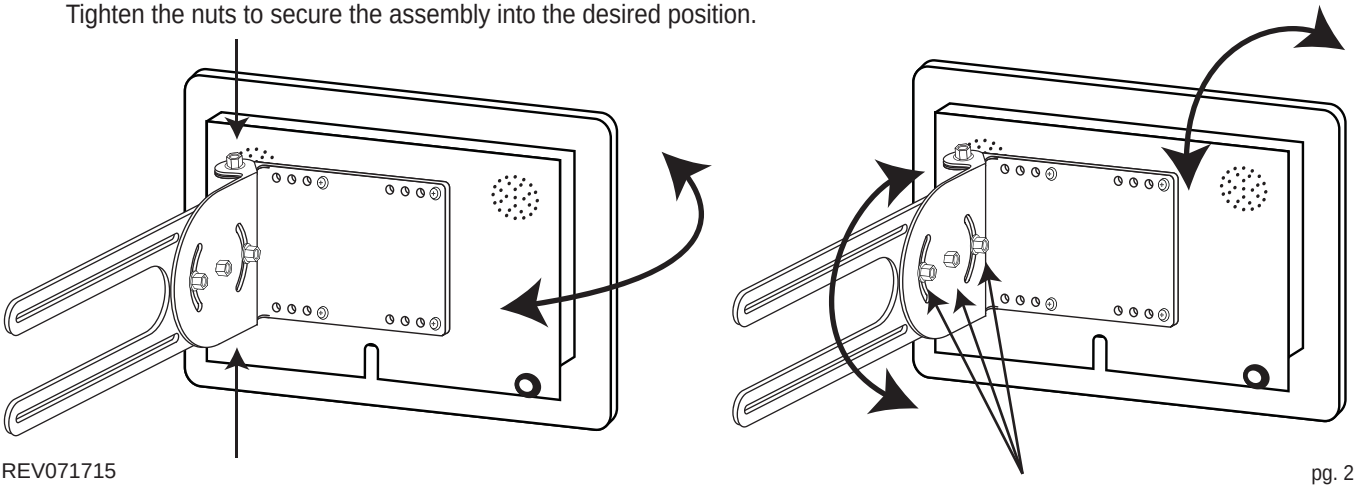
7 If you wish to adjust the angle of the Color Touch Panel, loosen the two nuts of the Touch Panel Plate's hinge to angle the panel toward and away from the spout. Loosen the three nuts of the Connector Plate to rotate the panel upwards or downwards. Tighten the nuts to secure the assembly into the desired position.