



# Flavor Burst™

## ELE 474 INTEGRATED SPIGOT SWITCH KIT

 **WARNING: DO NOT ATTEMPT INSTALLATION UNTIL THE MAIN POWER SUPPLY TO THE FREEZER HAS BEEN DISCONNECTED.**

- 1** Remove the freezer panel to access the draw-switch.
- 2** Remove the 2 screws from the draw switch.
- 3** Position the add-on microswitch alongside the draw switch with the switch lever extension under the switch lever on the draw switch. (See illustration below)
- 4** Install and tighten the 2ea. 4-40 x 1 1/4" screws with nuts to hold the switches in place.
- 5** Determine a location near the keypad to install the panel mounting jack. Drill a 1/4" hole in the panel.
- 6** Install the panel mounting jack and tighten sufficiently.
- 7** Plug the keypad stereo plug into the panel mounting jack.
- 8** Power up and test the equipment to verify the proper operation and switching. Make adjustments if necessary.
- 9** Replace the freezer panel.

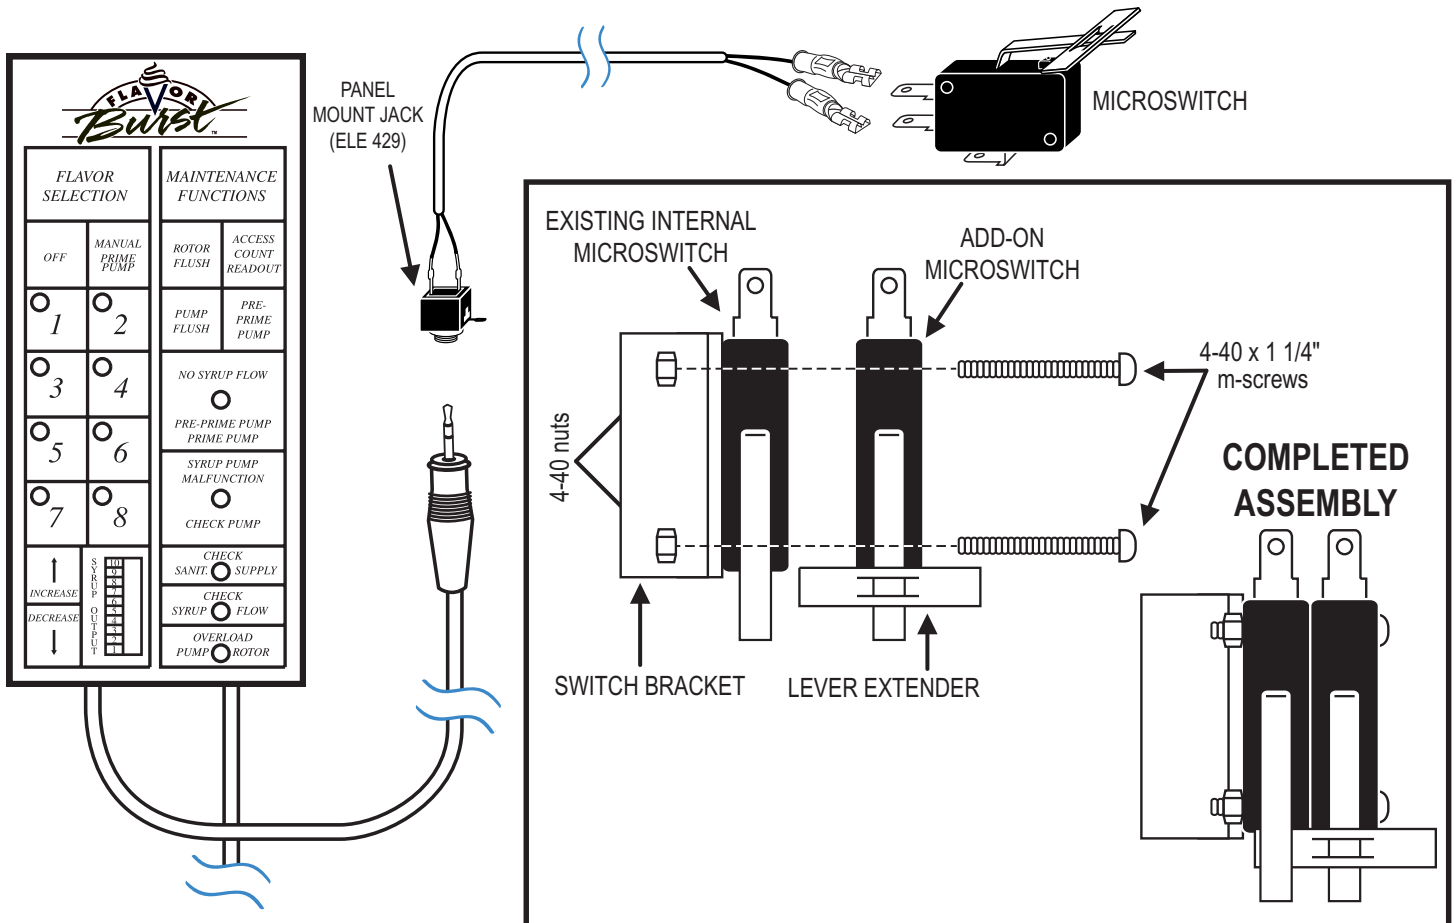

 **DISCLAIMER: UL DOES NOT RECOGNIZE THIS APPLICATION AS AN APPROVED PROCEDURE DUE TO THE DRILLING REQUIRED. WHEN THIS PROCEDURE IS USED ON A UL LISTED FREEZER, THE INSTALLER WILL BE PERFORMING INSTALLATION PROCEDURES BEYOND THE PARAMETERS UNDER WHICH THE UNIT WAS APPROVED.**