

Flavor Burst™

CW 177A Alternate Temporary Mounting Bracket Kit

This method of mounting the CC8 is recommended for temporary mounting such as for demos, shows, etc. For best results or for long-term mounting, use the permanent mounting procedure and bracket kit whenever possible.

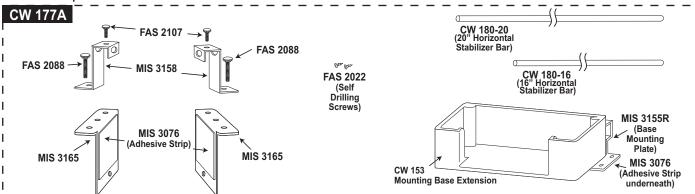

Thoroughly clean and dry the top and side surfaces of the freezer where the mounting assembly will be attached. Using a soft lead pencil, mark the center of the freezer top, directly above the door spout.

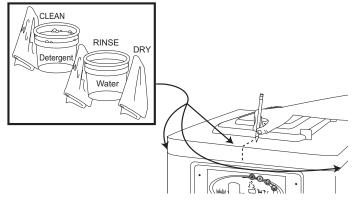

Assemble the Mounting Bracket kit by sliding the horizontal stabilizer bar through the back of the mounting base extension and through each of the tension brackets. Use both thumb screws to secure the anchor brackets to the stabilizer bar. Attach the Mounting Base to the extension as shown using the thumb screws.




A


NOTE: TWO STABILIZER BARS (20" AND 16" LONG) ARE INCLUDED WITH EACH UNIT. THE 20" BAR IS FOR USE WITH NARROWER FREEZERS AND BOTH BARS ARE TO BE USED TOGETHER ON WIDER FREEZERS.

pg. 1 of 3


Position the assembly on the freezer so that the tension brackets line up with the anchor brackets and the extension plate sits fully on top of the freezer. Using the anchor bracket thumb screws, secure the tension brackets to the anchor brackets. Use the anchor screw hole that allows the screw to be installed in a vertical

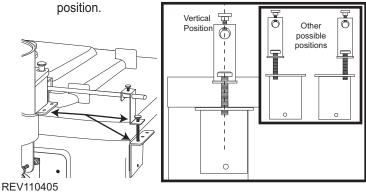


Using a soft lead pencil, mark around each anchor bracket.

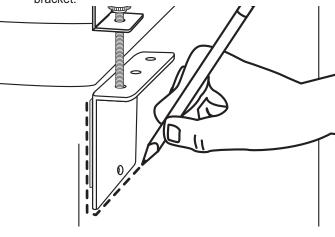

Disassemble the Mounting Bracket assembly. Remove the protective backing from the anchor brackets and press each one onto the freezer within the markings.

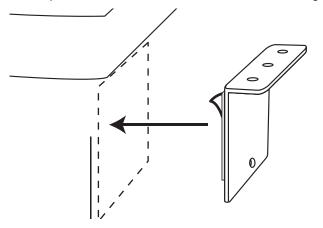


NOTE: IT IS HIGHLY RECOMMENDED SELF-TAP SCREWS ARE INSTALLED ON THE ANCHOR BRACKETS FOR MORE SECURE MOUNTING IF POSSIBLE. THE ADHESIVE TAPE IS NOT SUITABLE FOR PERMANENT OR LONG-TERM MOUNTING. IF SCREWS ARE NOT USED, FLAVOR BURST WILL NOT BE RESPONSIBLE FOR DAMAGE IF THE UNIT BECOMES DISCONNECTED FROM FREEZER.

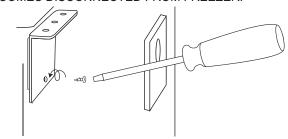



A

NOTE: IT IS BEST TO DRILL 1/8" HOLES BEFORE INSTALLING THE SCREWS. ENSURE THERE ARE NO WIRES BEHIND THE PANEL WHEN DRILLING OR INSTALLLING SCREWS.


Reassemble the rest of the Mounting Bracket and install the mounting base onto the base extension. Install the Bracket assembly to the anchor brackets on the freezer and tighten the hand screws to secure.

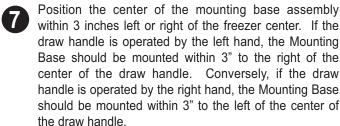

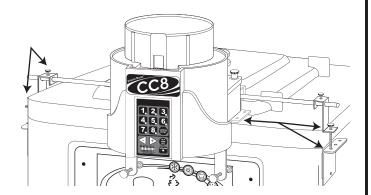


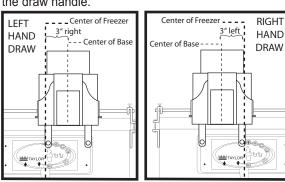

Adjust the vertical stabilizer bar screws to extend the bars downward as far as possible without obstructing any freezer operational controls. Tighten the screws to secure the position.

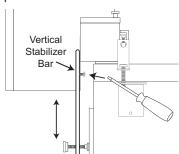


Use a soft lead pencil to mark around the plate of the base extension.

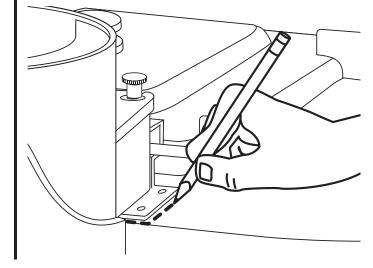


A

NOTE: REMOVE THE MOUNTING BASE FROM THE BRACKET TO LOOSEN AND TIGHTEN THE VERTICAL STABILIZER BAR SCREWS.

Remove the Mounting Bracket from the freezer anchor brackets and then remove the Mounting Base from the extension. Remove the protective tape from the adhesive of the extension plate and reinstall the bracket assembly to the freezer, placing the extension within the penciled marks and pressing firmly. Allow the

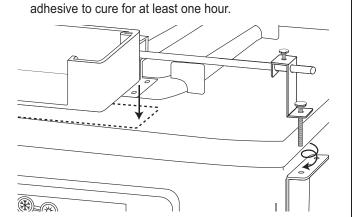

Install the mounting base to the mounting base extension and tighten the hand screws to secure. Adjust the vertical stabilizer bar thumb nuts to ensure the mounting base is level.

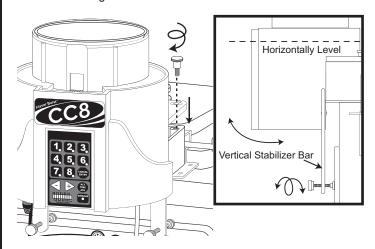

Ensure the chip hopper funnel is in place within the mounting base and install the carousel over the funnel with the #1 dispensing module in front. Ease the carousel down onto the mounting base until the

