


# Flavor Burst®


## FAC 202AK

### Taylor C712 / C713 / C716 / C717 Touchscreen Freezer Facade Kit Assembly and Installation


The freezer facade is designed to mask and cover the freezer's parts, cables and electronics that are not necessary for most daily operations. The design allows for a larger flat surface to which a decorative wrap can be applied. It has an opening to access freezer controls, and is easy to remove to for maintenance and cleaning. This kit is compatible with the Color Touch Panel system and keypad-operated systems, as well as a side-mounted touchscreen. Another facade kit, FAC 202KTS, is available if you have a touchscreen system and wish to mount the touchscreen on top of the freezer; that facade kit has a special top-mount bracket for the Touchscreen.

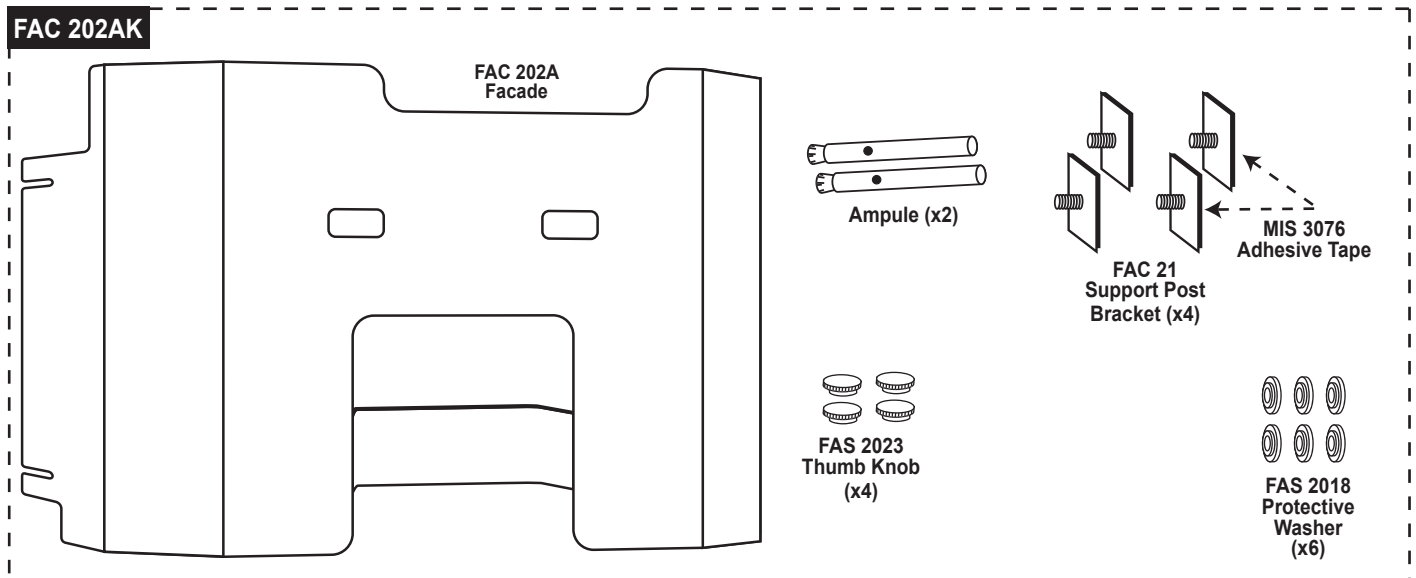

- 1 Remove the Flavor Burst Keypad or Color Touch Panel, mounting brackets & plates, and the two cable/tube casings.

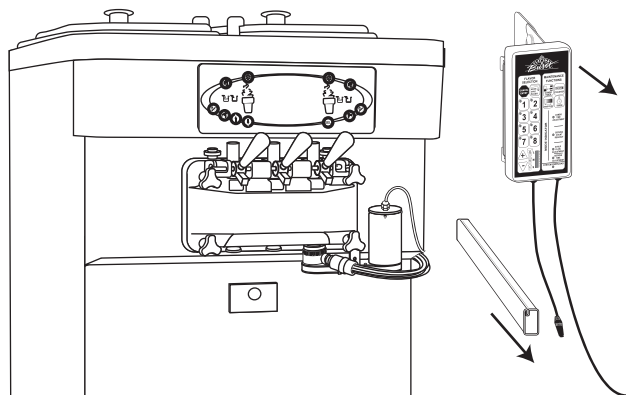


- 2 Thoroughly clean, rinse and dry the top front ledge and each side of the freezer.

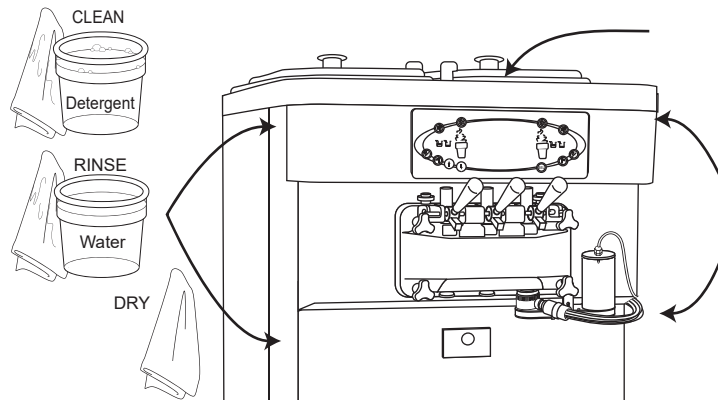


**NOTE:** THE FREEZER SURFACES MUST BE FREE OF ANY OILS OR RESIDUE OR THE ADHESIVE WILL NOT ADHERE PROPERLY.

- 3** Pinch the primer ampule at the dot on the tube to release the primer fluid into the brush end. Apply the primer (acetone) to freezer area where the mounting bracket will be attached. Allow the primer to dry completely before proceeding.

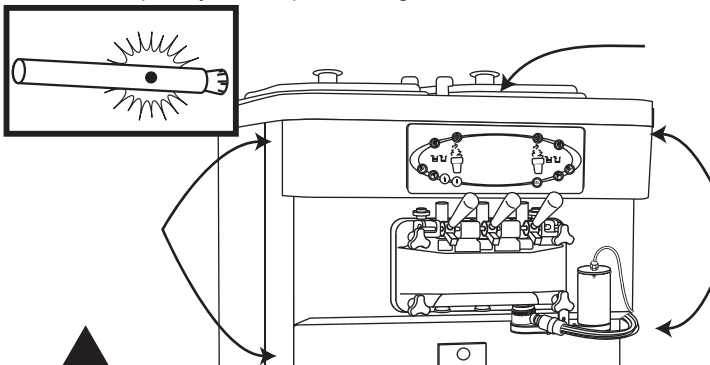


**!** **NOTE:** LIQUID IN THE AMPULES IMPROVES ADHESION.


- 4** Measure and mark the each side of the edge of the freezer 1-3/4" down from the top, and then again 10-3/4" from the top. Make the marks from the edge of the freezer to the seam of the side panel. These mark the positions for the four side brackets.

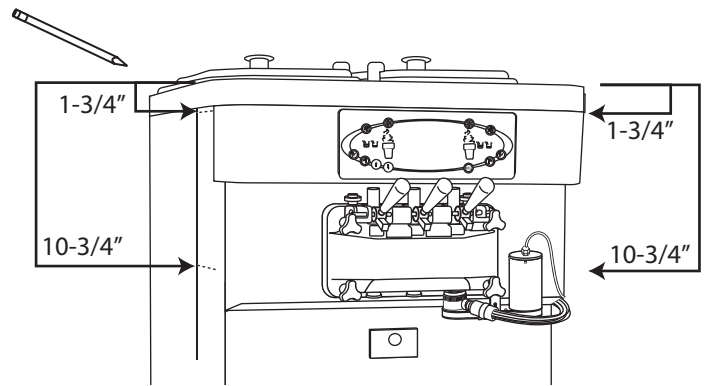


- 5** Remove the protective tape from each of the support brackets. Apply a bracket directly under each mark on the side of the freezer, as close to the service panel seam as possible without overlapping.

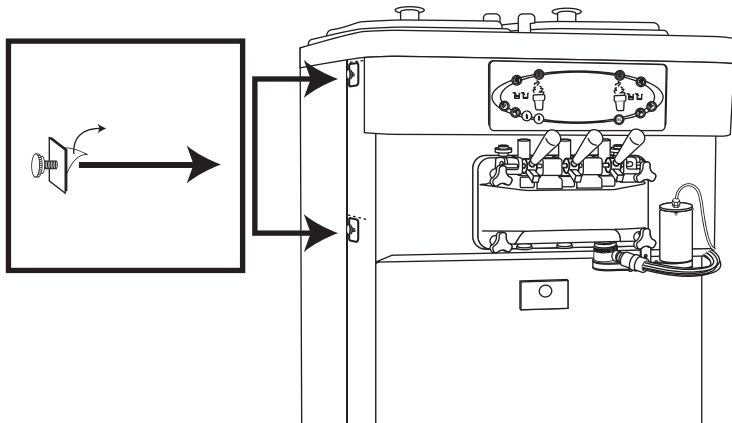


- 6** Install the facade onto the support bracket posts and secure it with the knobs.

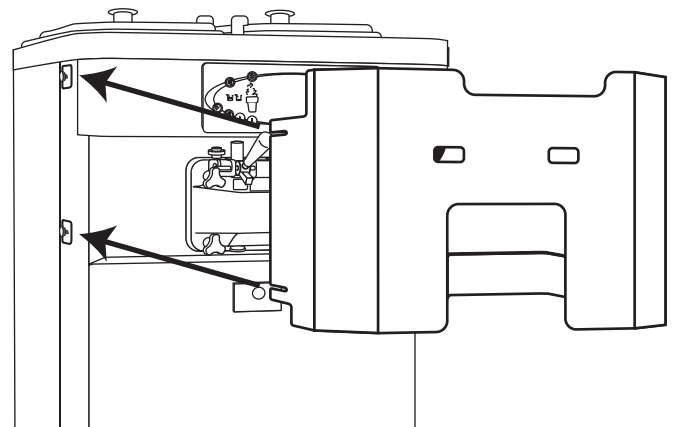

- 7** With a container under the spout, move the draw handle into the open position. If it comes in contact with the facade, loosen the support bracket hand knobs and adjust the facade until the draw handle is clear of it.

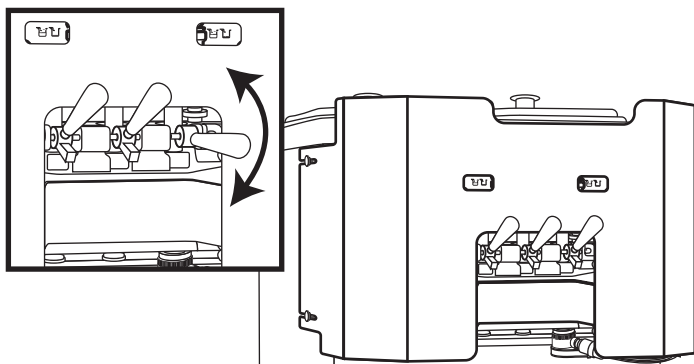


- 8** Remove the facade from the freezer so that the adhesive on the brackets can cure for AT LEAST 1 HOUR.

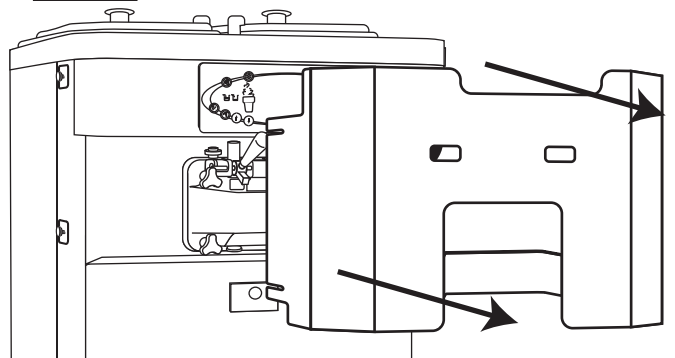

**!** **WARNING:** DO NOT ADD CONSTANT WEIGHT, SUCH AS THE FACADE, TO THE BRACKETS BEFORE THEY HAVE CURED FOR AT LEAST AN HOUR. ADDING WEIGHT PULLS THE ADHESIVE STRIP FROM THE SURFACE AND IT WILL NOT ADHERE PROPERLY.

- 9** Reinstall the 9-Tube Assembly casing and the keypad / Color Touch Panel. Reconnect the keypad to the switch port to complete the installation.

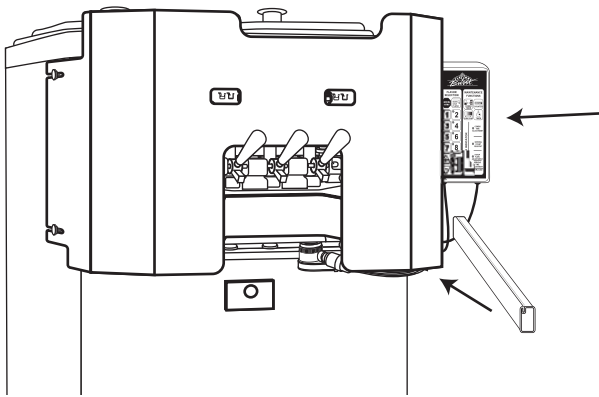

**NOTE:** THE COLOR TOUCH PANEL SHOULD BE MOUNTED WITHIN THE CUTOUT, ABOVE THE DRAW HANDLE THAT OPERATES THE FLAVOR BURST ASSEMBLY.

- 10 OPTIONAL:** If your facade has a wrap, you can use the protective washers included in this kit to prevent the wrap from buckling and twisting when using the thumb knobs. Install the washer on the bracket post, between the knob and the facade.

