


Flavor Burst™




MIS 3063 & MIS 3063-28 Freezer Shelves Assembly and Installation

The MIS 3063 and MIS 3063-28 freezer shelves provide convenient placement of Flavor Burst™ system for a variety of freezers. The MIS 3063 will accommodate many freezers with service panels up to 24" in width and the MIS 3063-28 will accommodate many freezers with service panels up to 28" in width. Confirm sizing and compatibility with your freezer, then complete the following procedure to prepare the assembly for use with your Flavor Burst™ system.



MIS 3063 & MIS 3063-28

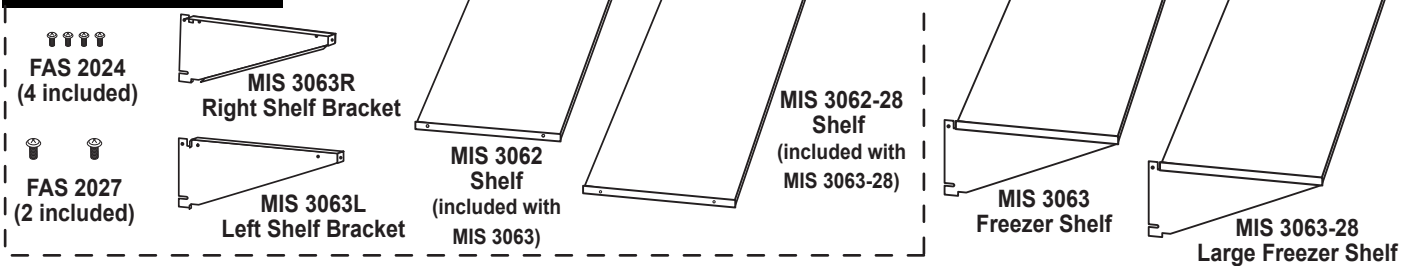


- 1 Choose which side of the freezer to install the shelf. Remove the freezer service panel and identify the right and left brackets. (The lips of each shelf bracket should face toward the inside of the assembly.)
- 2 Locate both freezer rail screws inside the bottom of the opening. Back out each screw 2-3 turns, but do not remove the screws.

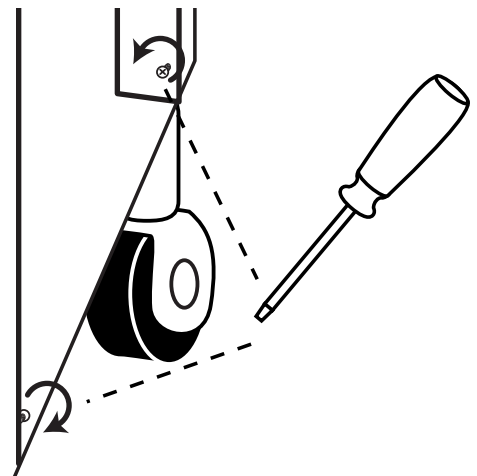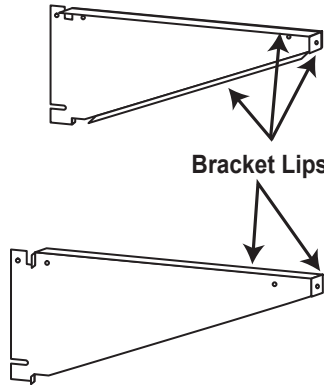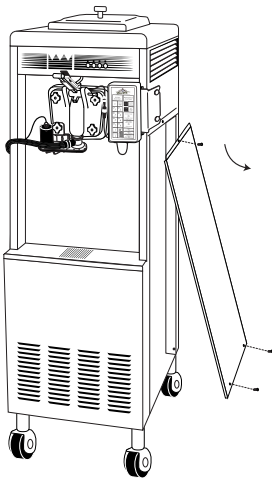


- 3 Slide each bracket groove onto each loosened screw and push the brackets inward as far as possible. Tighten the screws to hold the brackets in place.
- 4 Using the upper bracket screw hole as a guide, ensure that the brackets are securely in place and drill a 5/32" hole into each vertical freezer rail.

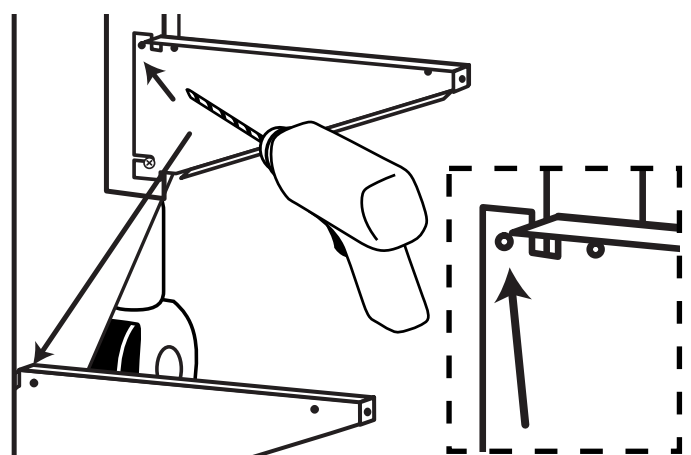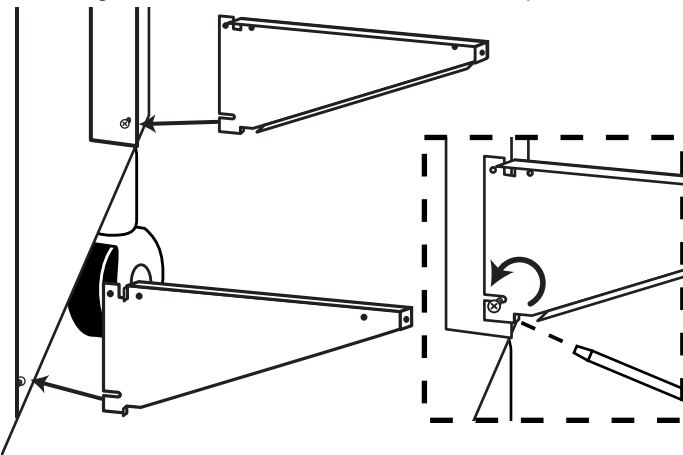


- 5** Install and tighten both FAS 2027 sheet metal screws into each bracket screw hole.

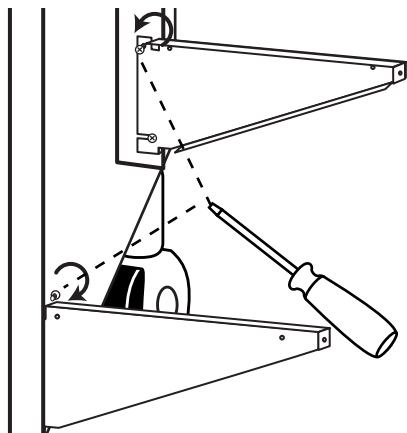


- 6** Ensure each bracket is level or perpendicular with the freezer side panel and make any necessary adjustments by loosening the bottom rail screw and adjusting the bracket until level. Tighten the screws to secure each bracket.

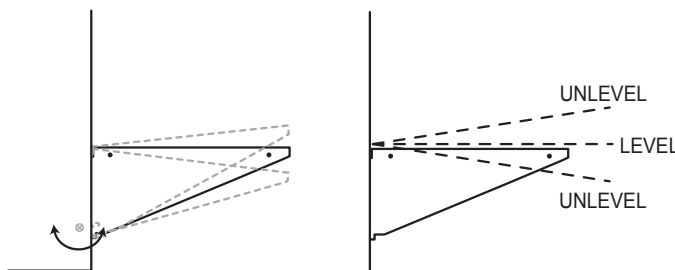


- 7** Reinstall the freezer service side panel.

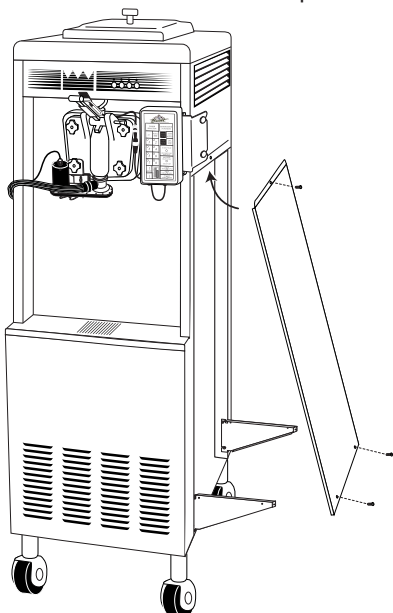

- 8** Position the shelf on top of the brackets and slide the shelf as far back to the rear of the freezer as possible.

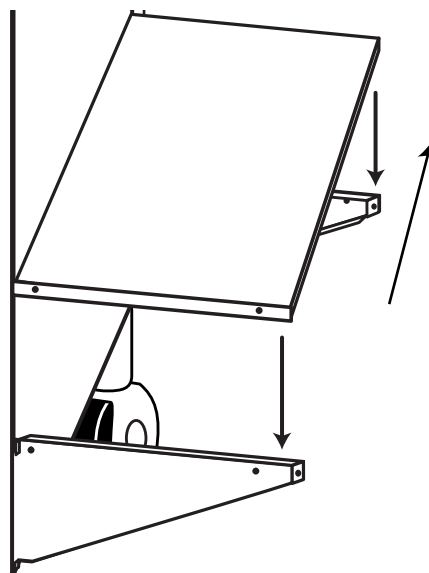

- 9** Install two FAS 2024 screws into the shelf lip and the front bracket and, if possible, two more screws into the shelf lip and rear bracket to complete the installation.

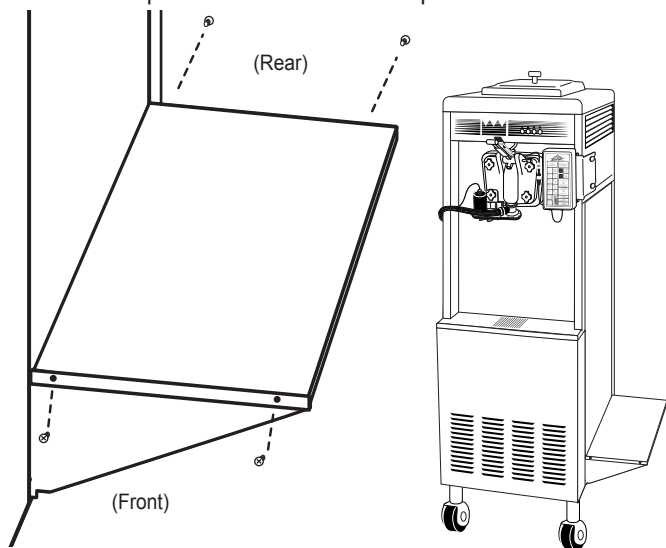

NOTE: IF THE SHELF EXTENDS OUT PAST THE REAR BRACKET, INSTALL THE TWO FAS 2024 FRONT SCREWS AND THEN INSTALL AN FAS 2024 SCREW INTO THE SIDE HOLE OF THE SHELF THAT ALIGNS WITH THE REAR BRACKET HOLE. TIGHTEN EACH SCREW TO SECURE AND COMPLETE THE INSTALLATION.

