


Flavor Burst™

MIS 3149-MX Keypad Cover Kit

Assembly and Installation

The MIS 3149-MX Keypad Cover Kit includes the stainless steel Keypad Cover and 8 label versions for use with the Keypad Cover depending on which MX model and freezer combination you're using: 1 dual soft-serve with plunger, 1 dual soft-serve with lift handle, 1 dual frozen beverage with plunger, 1 dual frozen beverage with lift handle, 1 combination lift handle and lift handle, 1 combination lift handle and draw handle, 1 combination plunger and lift handle, and 1 combination plunger and draw handle. Apply the appropriate label as follows:

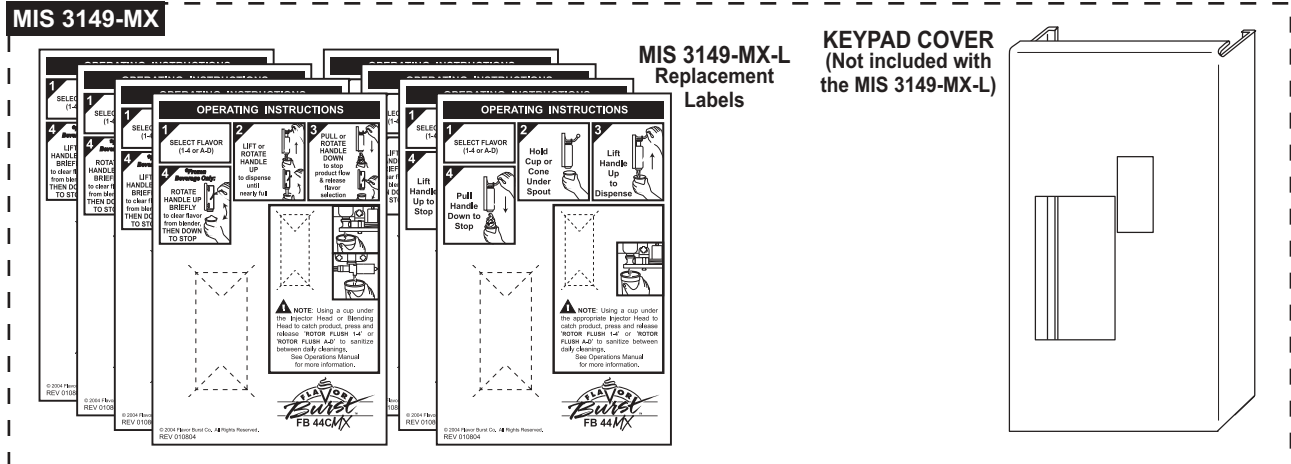

- 1 Peel the protective covering from the Keypad Cover and clean the surface before applying the label.
- 2 Remove the protective backing and apply the label to the Keypad Cover approximately 1/8" from the top edge and centering along the sides.
- 3 Cut along the dotted lines as shown and fold the edges of the label to the inside of the Keypad Cover openings.
- 4 Slide the Keypad Cover over the Keypad to complete the assembly.

