## Flavor Burst®

### POP 8515 C300 & 355 FCB Freezer Wrap


Installation

The POP 8515 freezer wrap is designed to fit both the Taylor® 355 and C300 FCB freezer models. Minor trimming is required. Complete the following procedure to apply the wrap to your freezer.




**NOTE:** ENSURE THE ENTIRE SURFACE OF THE FREEZER PANEL IS CLEAN BEFORE INSTALLING THE WRAP. REMOVE ANY DECALS THAT MAY BE IN THE WAY.

**POP 8515 FREEZER WRAP** 

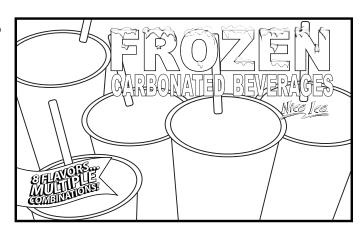

# POP 8515 APPLICATION FOR A TAYLOR® C300 FREEZER MODEL


Trim 1.25" off the left and right side of the freezer wrap.

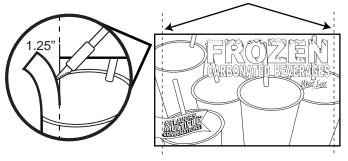


Remove the protective backing from the wrap.




3 Carefully apply the wrap to the freezer panel as shown. Secure the wrap by applying even pressure from one bottom corner to the top opposite corner, carefully working out any air bubbles created.

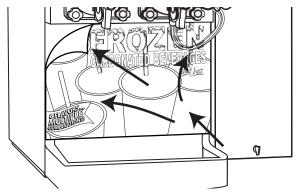

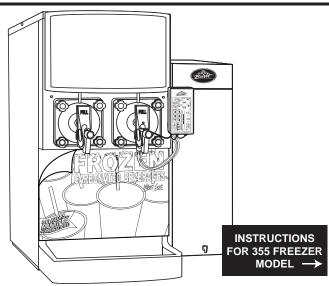

### B POP 8515 APPLICATION FOR A TAYLOR® 355 FREEZER MODEL


Measure 6.75" down from the top of the wrap and trim the rest off.

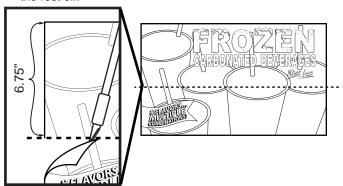


**5** Remove the protective backing from the wrap.



6 Carefully apply the wrap to the freezer panel under the drip tray as shown. Secure the wrap by applying even pressure from one bottom corner to the top opposite corner, carefully working out any air bubbles created.

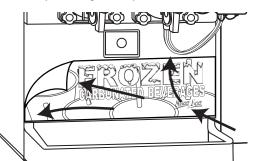


The flag on the extra piece of wrap may be cut out and applied to the freezer wrap as well.

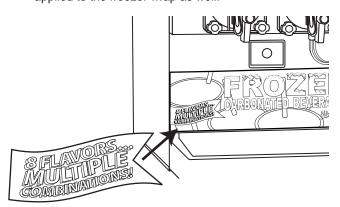

### POP 8515 ALTERNATE APPLICATION FOR A TAYLOR® 355 FREEZER MODEL

If you desire to have more coverage, hold the uncut wrap up to the freezer and mark the inside and outside areas of the drip tray. Cut around those marks.

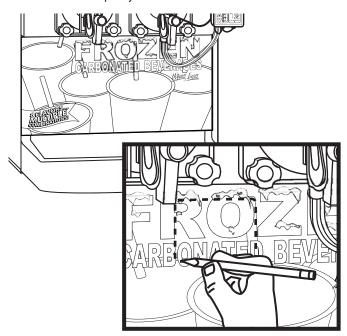

Remove the backing and apply the wrap to the freezer starting with the hole around the drip tray. The extra piece may also be trimmed to fit the surface of the drip tray.

