

Flavor Burst™


CC8 Keypad Operations

Adjusting Ingredient Concentration, Alternating Ingredient Timing, & Serving Size Timing


Modifications to the CC8 Keypad allow the operator to adjust and set certain keypad operations. The concentration of ingredients can be adjusted to allow more or less ingredients per serving. When choosing more than one ingredient for the serving, the operator can adjust the timing in change of ingredients from one layer to the next. Thus, the operator determines how wide the layers of flavor will be per serving. Also, the operator can preset the CC8 unit to automatically shut off the flow of ingredients when a particular serving size is finished dispensing. This allows for consistent serving sizes. Follow the instructions to adjust and set each keypad operation. Contact your local distributor for more information.

A ADJUSTING INGREDIENT CONCENTRATION


- 1 Press and hold the ALT TIME ADJ and #2 keys simultaneously until the keypad lights flash.

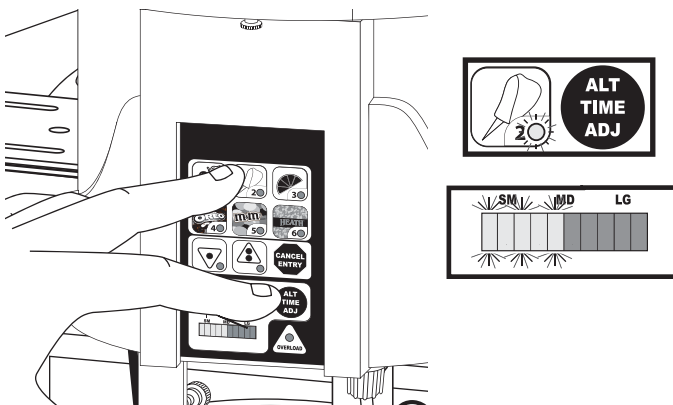


- 2 To increase the ingredient concentration (ie, add more ingredients to the serving), press the LARGE CUP (+) key. To decrease the concentration (ie, for less ingredients) press the SMALL CUP (-) key.

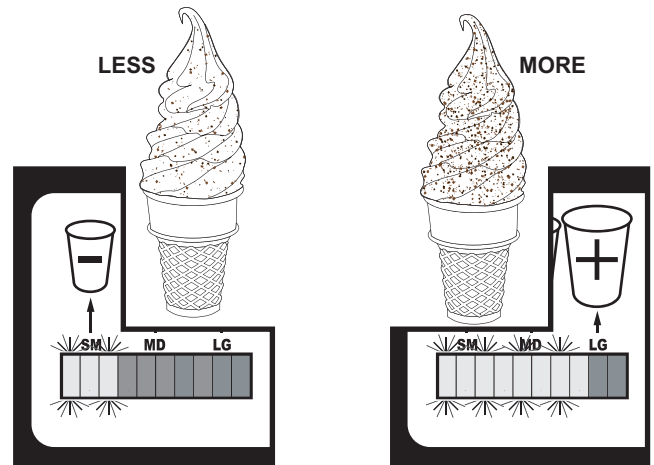

- 3 Press the Cancel Entry key to set the adjustment and exit the mode.

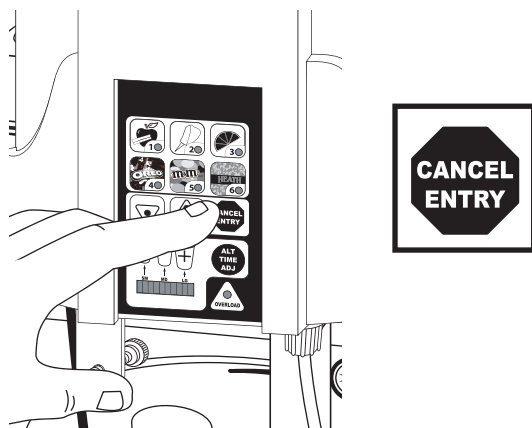


- 4 Draw a serving to determine if the adjustment is satisfactory. Repeat this process until the correct ingredient concentration is achieved.

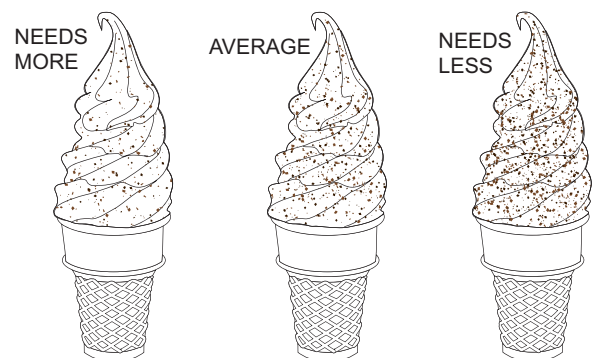

NOTE: THE INGREDIENT CONCENTRATION IS SET FOR ALL SERVING SIZES.

B ADJUSTING ALTERNATING INGREDIENT TIMING

- 1** Press and hold the #1 and #2 keys simultaneously until the keypad lights flash.

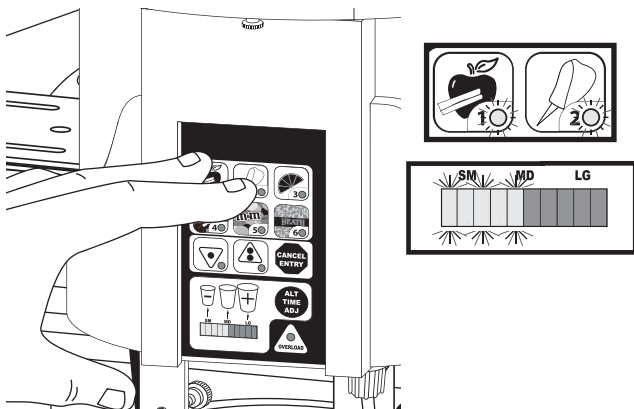


- 2** The number of lighted bars in the graph represent the length of time each layer is dispensed. Use the following chart to determine the bar graph setting needed for the desired dispense time for each ingredient layer.


ALT. INGREDIENT TIMING

1 Light	=	.5 seconds
2 Lights	=	.6 seconds
3 Lights	=	.7 seconds
4 Lights	=	.8 seconds
5 Lights	=	1.0 seconds
6 Lights	=	1.2 seconds
7 Lights	=	1.4 seconds
8 Lights	=	1.6 seconds
9 Lights	=	1.8 seconds
10 Lights	=	2.0 seconds

- 3** To increase the timing (for wider layers), press the LARGE CUP (+) key until the correct number of bar graph lights are lit.

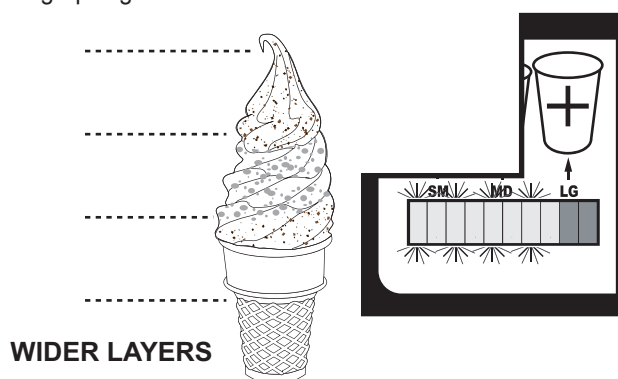

- 4** To decrease the timing (for more narrow layers), press the SMALL CUP (-) key until the correct number of bar graph lights are lit.

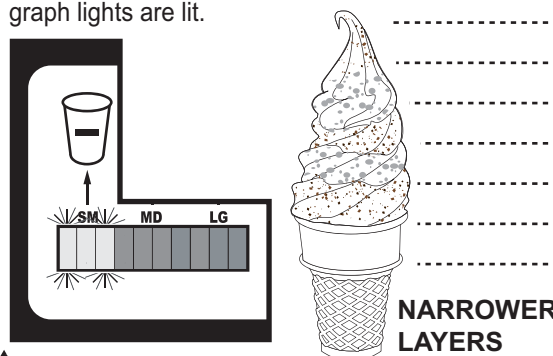


NOTE: IF THIS IS THE FIRST TIME ALTERNATING INGREDIENT TIMING HAS BEEN SET, SET THE TIMING TO ONE LIGHT (.5 SECONDS), DRAW A SERVING, AND THEN ADJUST THE TIMING FOR WIDER LAYERS IF NEEDED.

- 5** Press the Cancel Entry key to set the adjustment and exit the mode.




- 6** Draw a serving to determine if the adjustment is satisfactory. Repeat this process until the correct ingredient concentration is achieved.

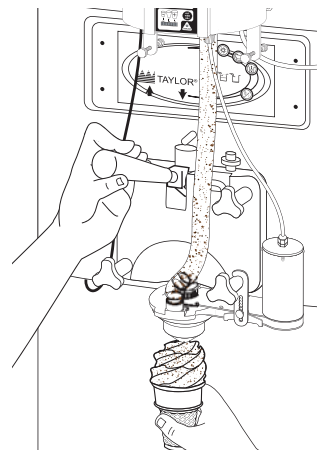


C SETTING SERVING SIZE TIMING

- 1** Determine which serving size to adjust. To adjust the small serving, press the SMALL CUP (-) key. To adjust the large serving, press the LARGE CUP (+) key. The medium serving is the default serving size; there is no key to press so proceed to the next step.

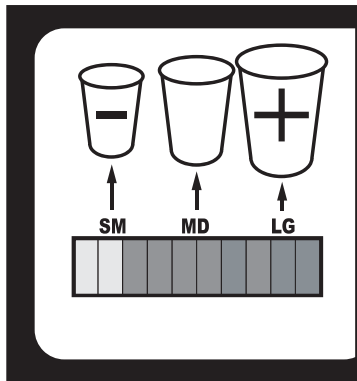

- 2** Press and hold the ALT TIME ADJ and #1 keys simultaneously until the keypad lights flash.

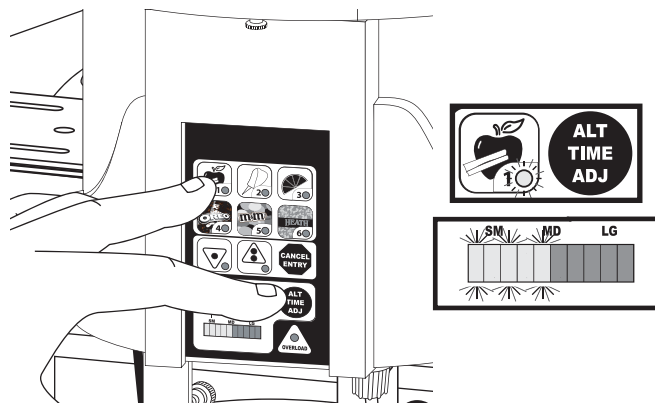

- 3** The number of lighted bars in the graph represent the length of time the serving is dispensed. Use the following chart to determine the bar graph setting needed for the desired serving size time.

SM / MED SIZE TIMING

1 Light	= INFINITE*
2 Lights	= 2 seconds
3 Lights	= 3 seconds
4 Lights	= 4 seconds
5 Lights	= 5 seconds
6 Lights	= 6 seconds
7 Lights	= 7 seconds
8 Lights	= 8 seconds
9 Lights	= 9 seconds
10 Lights	= 10 seconds

LARGE SIZE TIMING


1 Light	= INFINITE*
2 Lights	= 4 seconds
3 Lights	= 5 seconds
4 Lights	= 6 seconds
5 Lights	= 8 seconds
6 Lights	= 10 seconds
7 Lights	= 12 seconds
8 Lights	= 14 seconds
9 Lights	= 16 seconds
10 Lights	= 18 seconds

*INFINITE: Ingredients will flow as long as the draw switch is engaged.




NOTE: ENSURE THE CORRECT TIMING CHART IS USED FOR THE CORRESPONDING SERVING SIZE.

- 4** For a larger serving, press the LARGE CUP (+) key. For a smaller serving, press the SMALL CUP (-) key until the correct number of bar graph lights are lit.

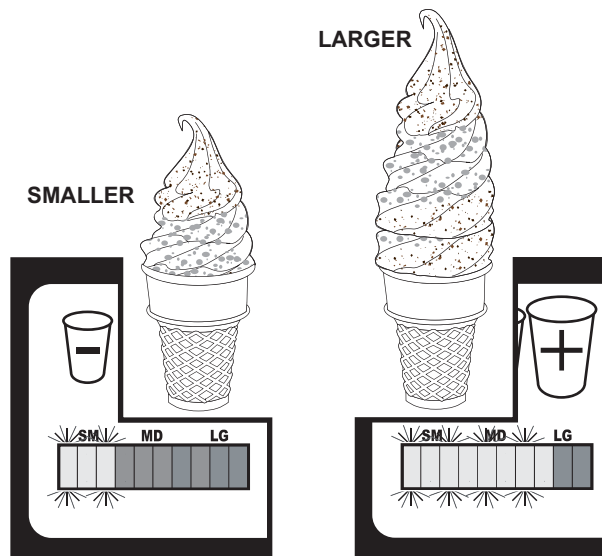

- 5** Press the Cancel Entry key to set the adjustment and exit the mode.

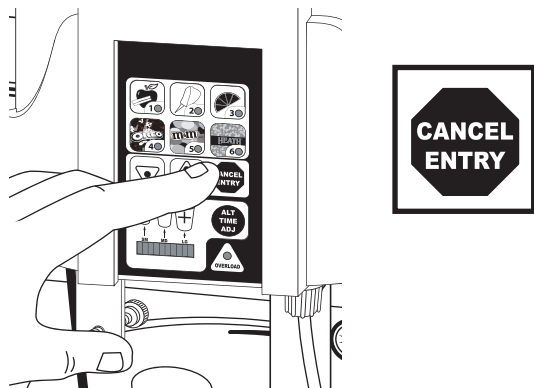

- 6** Repeat this process for each serving size (small, medium and large) until the correct serving time for each size is set.

