

Flavor Burst™

MIS 3119A Suspension Mounting Bracket Assembly and Installation

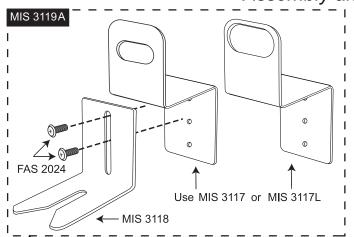

NOTE: TWO UPPER BRACKETS ARE INCLUDED WITH THE MIS 3119A SUSPENSION BRACKET ASSEMBLY. SELECT THE APPROPRIATE BRACKET FOR YOUR FREEZER: MIS 3117 (STANDARD) OR MIS 3117L (FOR MODELS WITH RECESSED HAND SCREWS).


Assemble the bracket and attach it to the Injector Assembly using the black hand-knob.

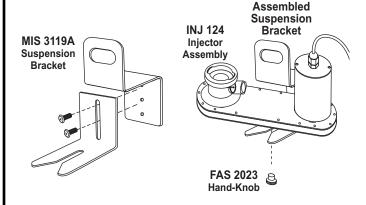


Install the Injector Adapter onto the freezer spout and remove one of the lower door hand screws.

ADPT 101A
Injector Adapter

Hang the suspension bracket on the post and attach the Injector Assembly to the Injector Adapter.

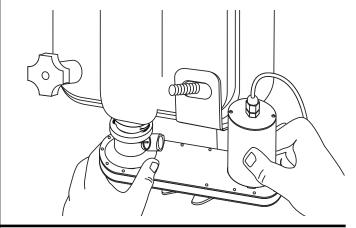

Ensure the Injector Assembly is level. If the Assembly is not level, adjust the screws on the bracket to the appropriate height.

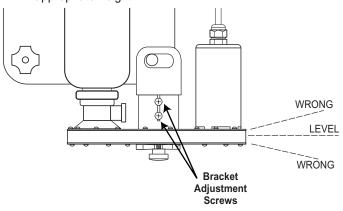

Replace the door hand screw and tighten to secure the Injector Assembly. Use the bracket screws for any

